

# kronotex

FLOORS FOR LIVING



‘LIFE CAN BE SO TOUGH,



# MAMMUT

12 mm



4x

1845 x 188 x 12 mm


72.64 x 7.40 x 0.472"

1,387 m<sup>2</sup>  
~ 15 kg


14.93 sq.ft  
33 lbs approx.

AC5 / 33


WOHNEN | DOMESTIQUE | LIVING | ЖИЛЬЯ

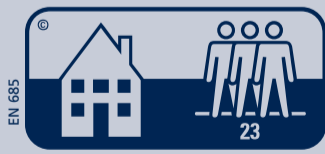

GEWERBLICH | PROFESSIONNEL | COMMERCIAL | КОММЕРЧЕСКОЙ

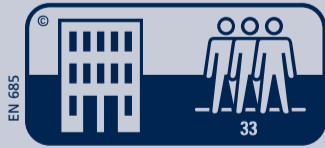

DIN EN 13329

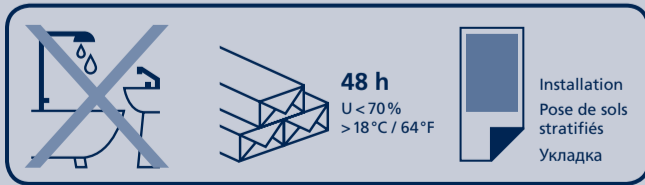


Made in Germany  
KRONOTEX.COM



4644.5



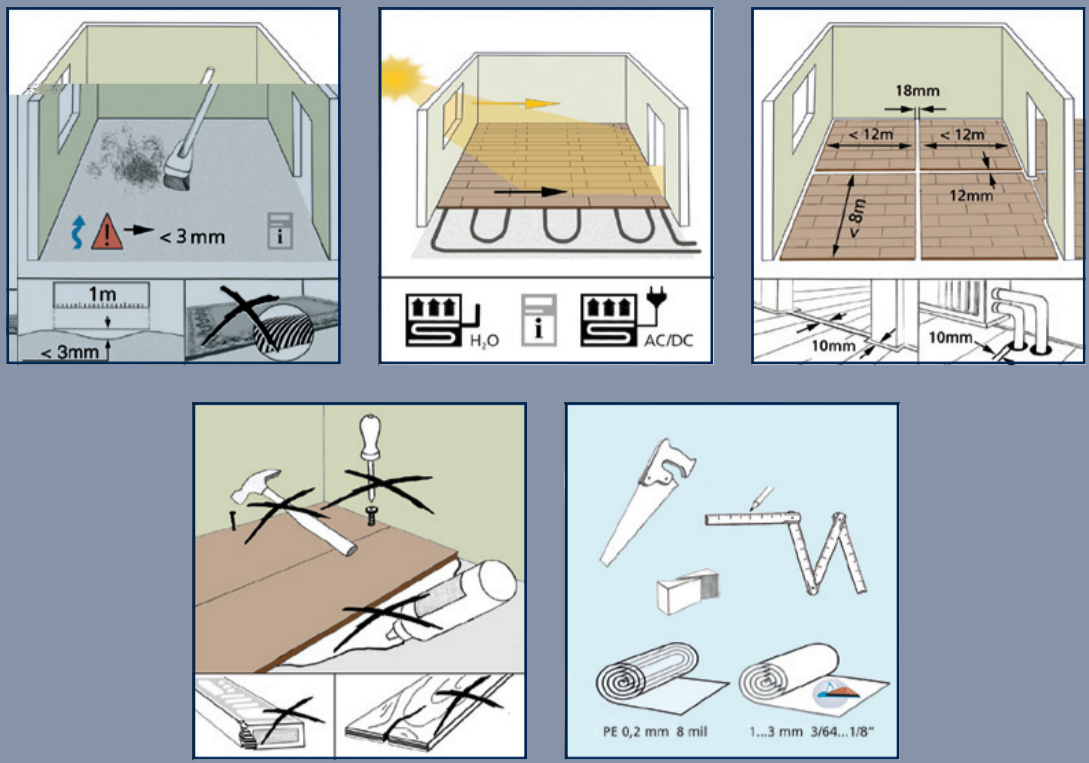

## INSTALLATION

1. Prepare the underlayment (PE 0,2 mm) over the substrate. A 20 cm section is highlighted for detail.
2. Lay the first plank, ensuring a 10 mm gap from the wall.
3. Lay the second plank, ensuring a 10 mm gap from the wall.
4. Lay the third plank, ensuring a 10 mm gap from the wall.
5. Lay the fourth plank, ensuring a 12° angle and a gap of > 400 mm from the wall.
6. Lay the fifth plank, ensuring a 12° angle.
7. Click the planks together. The sound effect is labeled "Clic".
8. Remove the underlayment from the installation area.
9. Prepare the wall, ensuring a 10 mm gap and a height of > 50 mm.
10. Lay the plank against the wall, ensuring a 10 mm gap.
11. Lay the plank against the wall, ensuring a 10 mm gap.
12. Drill holes for expansion, with a diameter of  $\varnothing x$  and a distance of  $\varnothing x + 20\text{ mm}$  from the edge.
13. Lay the plank against the wall, ensuring a 10 mm gap.
14. Finish the installation, ensuring a temperature of 20 - 22 °C and a humidity of U 50 - 60%.
15. Final room setup, including furniture and a rug. The floor is labeled as Type "W" soft / souple blando / мягкий.

## REMOVAL

