


LEVEL SCREW


Mounting



1. Install the level screws under the frame's mullions, roughly adjust the screws so they are level. Mounting in concrete requires pre-drilling with 6 mm drill, in brick 5 mm and in lightweight concrete 10 mm (+Lightweight plug). Use TX30 recess.

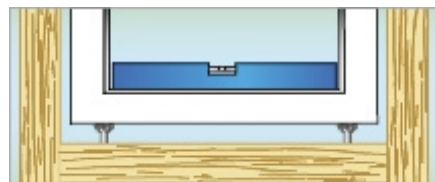

2. Place the window on the level screws. The gap under the frame should be about 15 mm.

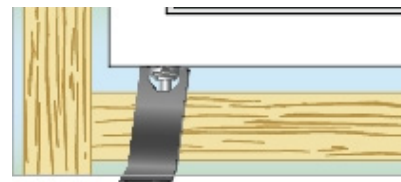

3. Fine adjust using the adjuster tool so the frame is completely in level.